

# User Manual DA16200 SDK Porting Guide UM-WI-045

## Abstract

This document describes changes in SDK structure and IAR projects in DA16200 SDK v2.3.4.0 to make porting for the user easier compared to the previous version.



# DA16200 SDK Porting Guide

# Contents

Ab	stract			1
Co	ntents	S		2
Fig	jures.			2
1	Refe	rences		3
2	Intro	duction.		3
3	SDK Structure			
	3.1	Change	es in SDK Structure	3
	3.2	Custom	er Folder	
	3.3	User Ap	oplication Codes	4
4	IAR F	Project		5
	4.1	IAR Wo	orkspace File	5
	4.2	IAR Pro	pject Structure	7
	4.3	Change	e in IAR Project	
		4.3.1	User Application Code	
		4.3.2	Provision Project	
Re	vision	History	,	

# **Figures**

3
4
4
5
5
6
7
7
8
8
9



## **DA16200 SDK Porting Guide**

## **1** References

- [1] DA16200, EVK User Manual, User Manual, Dialog Semiconductor
- [2] DA16200, Example Application Manual, User Manual, Dialog Semiconductor

## 2 Introduction

This document describes changes in SDK structure and IAR projects in DA16200 SDK v2.3.4.0 to make porting for the user easier compared to the previous version.

## 3 SDK Structure

The DA16200 SDK v2.3.4.0 has eight folders:

- **build**: build scripts, temporary build artifacts, or environment files
- **customer**: IAR project files and applications for customer
- **doc**: user documents (user guides, programmer guides, etc)
- img: to which the images built / pre-compiled are copied
- lib: to which the pre-compiled lib files (.a) are saved
- sample: to demonstrate common use cases of what the DA16200 SDK provides
- **src**: core source codes
- src\_tim: source codes for TIM
- version: version files to include when Image created

## 3.1 Changes in SDK Structure

DA16200 Generic SDK v2.3.4.0 adds the new customer folder for customer code to be developed independently of the SDK core code.

SDK > DA16200_SDK_Generic_v2.3.4.0				
Name	Date modified	Туре		
📕 build	3/22/2021 3:07 PM	File folder		
📜 customer	3/22/2021 3:07 PM	File folder		
📜 doc	3/22/2021 3:07 PM	File folder		
📜 img	3/22/2021 3:07 PM	File folder		
📜 lib	3/22/2021 3:07 PM	File folder		
📕 sample	3/22/2021 3:07 PM	File folder		
📜 src	3/22/2021 3:07 PM	File folder		
📕 src_tim	3/22/2021 3:07 PM	File folder		
📕 version	3/22/2021 3:07 PM	File folder		

Figure 1: SDK Structure in v2.3.4.0

**User Manual** 



## 3.2 Customer Folder

The user application codes of v2.3.4.0 are combined in new customer folder that is composed of three sub-folders:

- **apps**: user application code and header files
- main: start code and configuration header files
- project: customer SDK project files

> SDK > DA16200_SDK_Generic_v2.3.4.0 > customer			
Name	Date modified	Туре	
📕 apps	3/22/2021 3:07 PM	File folder	
📜 main	3/22/2021 3:07 PM	File folder	
📜 project	3/22/2021 3:07 PM	File folder	

#### Figure 2: New Customer Folder in v2.3.4.0

## 3.3 User Application Codes

The user application codes of v2.3.3.0 are distributed in several folders.

SDK > DA16200_SDK_Generic_v2.3.3.0 > src > application					
Name Date modified Type					
📕 dpm	1/28/2021 5:50 PM	File folder			
📕 inc	1/28/2021 5:50 PM	File folder			
system_apps	1/28/2021 5:50 PM	File folder			
user_command	1/28/2021 5:50 PM	File folder			
📜 user_http	1/28/2021 5:50 PM	File folder			

~		
Name	Date modified	Туре
📔 hello_world.c	12/15/2020 9:18 PM	C File

#### Figure 3: User Application Code in v2.3.3.0



## **DA16200 SDK Porting Guide**

The user application codes of v2.3.4.0 are combined in \customer\apps\src folder.

SDK > DA16200_SDK_Generic_v2.3.4.0 > customer > apps > src				
Name	Date modified	Туре		
📔 hello_world.c	3/10/2021 7:10 PM	C File		
📔 user_apps.c	3/10/2021 7:10 PM	C File		
📔 user_atcmd.c	3/10/2021 7:10 PM	C File		
📔 user_command.c	3/10/2021 7:10 PM	C File		
📔 user_dpm.c	3/10/2021 7:10 PM	C File		
📔 user_gpio_handle.c	3/10/2021 7:10 PM	C File		
📔 user_http_client.c	3/10/2021 7:10 PM	C File		
📔 user_http_server.c	3/10/2021 7:10 PM	C File		
📔 user_nvram_cmd_table.c	3/10/2021 7:10 PM	C File		
📔 user_softap_provision.c	3/10/2021 7:10 PM	C File		
🞽 user_uart.c	3/10/2021 7:10 PM	C File		

### Figure 4: User Application Code in v2.3.4.0

#### **IAR Project** 4

#### IAR Workspace File 4.1

The IAR IDE workspace file in v2.3.3.0 is \build\DA16xxx.eww.

SDK > DA16200_SDK_Generic_v2.3.3.0 > build				
Name	Date modified	Туре		
🧵 asic	1/28/2021 5:50 PM	File folder		
📕 ldscripts	2/16/2021 12:58 PM	File folder		
📕 macros	2/16/2021 12:58 PM	File folder		
l roms	1/28/2021 5:50 PM	File folder		
SBOOT	1/28/2021 5:50 PM	File folder		
settings	1/28/2021 5:50 PM	File folder		
📕 util	3/15/2021 4:30 PM	File folder		
atcmd.dep	3/22/2021 5:38 PM	DEP File		
atcmd.ewp	12/15/2020 9:19 PM	EWP File		
🗋 coap.dep	3/22/2021 5:38 PM	DEP File		
🗋 coap.ewp	12/15/2020 9:20 PM	EWP File		
common_host.dep	3/22/2021 5:38 PM	DEP File		
common_host.ewp	12/15/2020 9:18 PM	EWP File		
customer_app.dep	3/22/2021 5:38 PM	DEP File		
customer_app.ewp	12/15/2020 9:18 PM	EWP File		
K DA16xxx.eww	12/15/2020 9:20 PM	IAR IDE Workspace		

#### Figure 5: IAR IDE Workspace File in v2.3.3.0

User Manual	Revision 1.0	<b>30-Mar-2021</b>
CEP0012	5 of 11	© 2021 Dialog Semiconductor



## **DA16200 SDK Porting Guide**

The IAR IDE workspace file in v2.3.4.0 is \customer\project\DA16xxx.eww.

Name	Date modified	Туре
🦲 asic	3/22/2021 3:07 PM	File folder
📒 settings	3/22/2021 3:07 PM	File folder
📄 atcmd.dep	3/19/2021 4:18 PM	DEP File
atcmd.ewp	3/10/2021 7:10 PM	EWP File
📄 coap.dep	3/19/2021 4:18 PM	DEP File
🗋 coap.ewp	3/10/2021 7:10 PM	EWP File
🗋 common_host.dep	3/19/2021 4:18 PM	DEP File
🗋 common_host.ewp	3/10/2021 7:10 PM	EWP File
📄 customer_app.dep	3/19/2021 4:18 PM	DEP File
📄 customer_app.ewp	3/10/2021 7:10 PM	EWP File
💥 DA16xxx.eww	3/10/2021 8:41 PM	IAR IDE Workspace
📄 http.dep	3/19/2021 4:18 PM	DEP File
http.ewp	3/10/2021 7:10 PM	EWP File
📄 iperf.dep	3/19/2021 4:18 PM	DEP File
iperf.ewp	3/10/2021 7:10 PM	EWP File
🗋 main.dep	3/19/2021 4:18 PM	DEP File
📄 main.ewd	3/10/2021 7:10 PM	EWD File
main.ewp	3/10/2021 7:10 PM	EWP File

Figure 6: IAR IDE Workspace File in v2.3.4.0

**User Manual** 



## 4.2 IAR Project Structure

The DA16200 SDK v2.3.4.0 has 11 projects:

- common\_host: Host interface initialize functions project
- sys\_common: system common project
- atcmd: AT commands project
- http: HTTP client and server project
- ota: Over the air firmware update project
- mqtt: MQTT subscriber and publisher project
- **coap**: CoAP client and server project
- Iperf: NetX/NetX Duo IPerf project
- **src\_tim**: PTIM project
- **customer\_app**: customer application project
- main: main project

Files	\$~	d:
🖻 🖻 DA16xxx		
⊣⊞ 🗇 common_host - Release-ASIC	~	
⊣⊕ 🗇 sys_common - Release-ASIC	~	
⊣ 🕀 🗇 atcmd - Release-ASIC	~	
⊣⊞ 🗇 http - Release-ASIC	~	
—⊞ 🗇 ota - Release-ASIC	~	
⊢⊕ 🗇 provision - Release-ASIC	~	
⊣⊞ 🗇 mqtt_client - Release-ASIC	~	
⊣⊕ 🗇 coap - Release-ASIC	~	
⊣⊞ 🗇 iperf - Release-ASIC	~	
⊣⊞ 🗇 customer_app - Release-ASIC	~	
⊣⊞ 🗇 slib_tim - Release-ASIC	~	
└─⊞ 🗇 main - Release-ASIC	~	

#### Figure 7: IAR Project Structure in v2.3.3.0

Files	23	ß.
🖻 🖸 DA16xxx		
⊣⊞ 🗇 common_host - Release-ASIC	×	
⊣⊞ 🗇 sys_common - Release-ASIC	¥	
⊣⊞ 🗇 atcmd - Release-ASIC	×	
⊣⊞ 🗇 http - Release-ASIC	×	
⊣⊞ 🗇 ota - Release-ASIC	×	
⊣⊞ 🗇 mqtt_client - Release-ASIC	×	
⊣⊕ 🗇 coap - Release-ASIC	×	
⊣⊞ 🗇 iperf - Release-ASIC	×	
⊣⊞ 🗇 slib_tim - Release-ASIC	×	
H 🗇 🗇 customer_app - Release-ASIC	×	
└─⊞ 🗇 main - Release-ASIC	•	

#### Figure 8: IAR Project Structure in v2.3.4.0

lleor	Manual
USCI	Manuai



## 4.3 Change in IAR Project

## 4.3.1 User Application Code

The user application codes move to customer\_app project from main project.

	•
- 🗖 🗀 Customer_Apps	
│	
🖵 🗁 Output	
—⊕ 🗇 slib_tim - Release-ASIC	¥
	× .
–-⊞ 🗀 user_http	
–	
–-⊞ 🖸 user_dpm.c	
–⊞ 🖸 user_gpio_handle.c	
└─⊞ 🖸 user_softap_provision.c	
🗕 🔁 🗀 Command	
Hain 🗀 Main	
🗕 🔁 🚞 Startup	
🛏 🔝 config_generic_sdk.h	
Len Cutput	

#### Figure 9: User Application Code in v2.3.3.0

├─── 🗇 customer_app - Release-ASIC	•
📙 🖵 🗀 Command	
–-⊞ 📴 user_http	
–⊕ 🖻 hello_world.c	
–	
–-⊞ 📴 user_dpm.c	
└─⊞ 🔁 user_uart.c	
🗕 🛏 🗀 Doorbell	
🗕 🕀 🖸 user_apps.c	
📙 🖵 🗀 Output	
└-🗦 🗇 main - Release-ASIC	~
H 🕀 🧰 Main	
🛏 🗀 Startup	
L 🕀 🗀 Output	

#### Figure 10: User Application Code in v2.3.4.0

User Manual



## 4.3.2 Provision Project

The provision project moves to the sample project of \sample\ETC\SoftAp\_Provisioning.

SDK > DA16200_SDK_Generic_v2.3.4.0 > sample > ETC > SoftAp_Provisioning					
Name	✓ Date modified	Туре			
📜 build	3/22/2021 3:07 PM	File folder			
📜 img	3/10/2021 7:09 PM	File folder			
📕 src	3/22/2021 3:07 PM	File folder			
ReadMe.md	3/10/2021 7:09 PM	MD File			

Figure 11: Provision Project Location in v2.3.4.0

**User Manual** 



# **Revision History**

Revision	Date	Description
1.0	30-Mar-2020	First Release

**User Manual** 



#### **Status Definitions**

Status	Definition
DRAFT	The content of this document is under review and subject to formal approval, which may result in modifications or additions.
APPROVED or unmarked	The content of this document has been approved for publication.

#### Disclaimer

Unless otherwise agreed in writing, the Dialog Semiconductor products (and any associated software) referred to in this document are not designed, authorized or warranted to be suitable for use in life support, life-critical or safety-critical systems or equipment, nor in applications where failure or malfunction of a Dialog Semiconductor product (or associated software) can reasonably be expected to result in personal injury, death or severe property or environmental damage. Dialog Semiconductor and its suppliers accept no liability for inclusion and/or use of Dialog Semiconductor products (and any associated software) in such equipment or applications and therefore such inclusion and/or use is at the customer's own risk.

Information in this document is believed to be accurate and reliable. However, Dialog Semiconductor does not give any representations or warranties, express or implied, as to the accuracy or completeness of such information. Dialog Semiconductor furthermore takes no responsibility whatsoever for the content in this document if provided by any information source outside of Dialog Semiconductor.

Dialog Semiconductor reserves the right to change without notice the information published in this document, including, without limitation, the specification and the design of the related semiconductor products, software and applications. Notwithstanding the foregoing, for any automotive grade version of the device, Dialog Semiconductor reserves the right to change the information published in this document, including, without limitation, the specification and the design of the related semiconductor products, software and applications, in accordance with its standard automotive change notification process.

Applications, software, and semiconductor products described in this document are for illustrative purposes only. Dialog Semiconductor makes no representation or warranty that such applications, software and semiconductor products will be suitable for the specified use without further testing or modification. Unless otherwise agreed in writing, such testing or modification is the sole responsibility of the customer and Dialog Semiconductor excludes all liability in this respect.

Nothing in this document may be construed as a license for customer to use the Dialog Semiconductor products, software and applications referred to in this document. Such license must be separately sought by customer with Dialog Semiconductor.

All use of Dialog Semiconductor products, software and applications referred to in this document is subject to Dialog Semiconductor's Standard Terms and Conditions of Sale, available on the company website (www.dialog-semiconductor.com) unless otherwise stated.

Dialog, Dialog Semiconductor and the Dialog logo are trademarks of Dialog Semiconductor PIc or its subsidiaries. All other product or service names and marks are the property of their respective owners.

© 2021 Dialog Semiconductor. All rights reserved.

# **Contacting Dialog Semiconductor**

United Kingdom (Headquarters) Dialog Semiconductor (UK) LTD Phone: +44 1793 757700

Germany Dialog Semiconductor GmbH

Phone: +49 7021 805-0

The Netherlands Dialog Semiconductor B.V. Phone: +31 73 640 8822

Email: enquiry@diasemi.com

#### **User Manual**

#### North America

Dialog Semiconductor Inc. Phone: +1 408 845 8500

#### Japan

Dialog Semiconductor K. K. Phone: +81 3 5769 5100

#### Taiwan Dialog Semiconductor Taiwan Phone: +886 281 786 222

Web site: www.dialog-semiconductor.com

#### Hong Kong

Dialog Semiconductor Hong Kong Phone: +852 2607 4271

#### .....

Dialog Semiconductor Korea Phone: +82 2 3469 8200

## China (Shenzhen)

Dialog Semiconductor China Phone: +86 755 2981 3669

China (Shanghai) Dialog Semiconductor China Phone: +86 21 5424 9058

#### Revision 1.0

30-Mar-2021